

GALVANISED WORKBENCH WITHOUT LOUVRE PANEL

RGWB

BEFORE YOU BEGIN!


- Ensure that you have sufficient space to work and allow at least **ONE HOUR** for assembly, particularly if you have never built a unit before.
- We recommend two-person assembly.
- Always use a rubber mallet for assembly and **NEVER** a metal hammer. Please note: force is required! The components are designed to fit tightly together so that they don't wobble or break apart, so a light tap will **NOT** locate the parts sufficiently.
- We recommend wearing gloves when assembling.

PLEASE CHECK YOUR COMPONENTS

These are the component parts required to assemble your galvanised workbench. Please take time to identify each part before assembly!



Beams

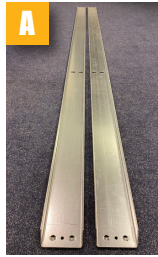

A
Top Shelf Width Beam 2400mm.
Qty 2



B
Half Shelf Width Beam 2400mm.
Qty 4



C
Top Shelf Depth Beam 600mm.
Qty 2




D
Half Shelf Depth Beam 600mm.
Qty 4



E
Heavy Duty Shelf Support 310mm.
Qty 4



F
Heavy Duty Shelf Support 600mm.
Qty 2

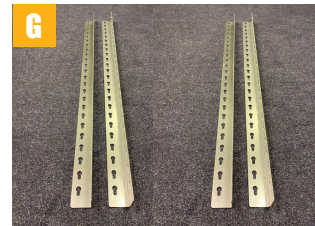

G
Heavy Duty Uprights 929mm.
Qty 4

Shelves



H
Upper Shelf 2390mm wide x 590mm deep.
Qty 1



I
Lower Shelf 2390mm wide x 304mm deep.
Qty 2

Feet



J
Plastic Feet.
Qty 4

Accessories



M
Assembly Gloves (included) and Rubber Mallet (optional and recommended)

Shelf Supports

Upright Posts

ASSEMBLY INSTRUCTIONS

SHELVINGDirect
UK Manufacturer of Shelving & Storage

Thank you for purchasing your ShelvingDirect® shelving

If you have any questions regarding the assembly or contents of your order, please call ShelvingDirect® on **0121 508 5877** Monday to Friday 8.30am–5.30pm or email sales@shelvingdirect.co.uk

ShelvingDirect® is a trading name of Rotadex Systems Ltd, Systems House, Central Business Park, Mackadown Lane, Birmingham B33 0JL.

WE RECOMMEND 2 PERSON ASSEMBLY




STEP 1

Arrange the four uprights [G] so that the "keyholes" have the larger aperture uppermost. Add the four plastic feet [N] to bottom of each upright.



"Keyholes" MUST have the larger aperture uppermost!

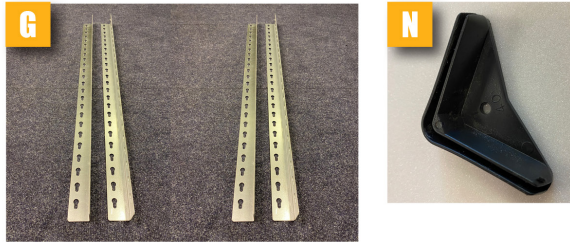


STEP 2

With one person holding one upright [G] each, hold them parallel and then join them by adding side beams [C, D] as pictured. Use the rubber mallet to strike the sidebeams' lugs firmly down in the the "keyholes".

FORCE IS REQUIRED!

Pinch the side beam and upright together using thumb and forefinger to ensure lugs and holes are located before hammering. **IMPORTANT:** ensure [D] side beams are used for the two lower beams, and side beam [C] as the upper beam. Repeat this process to create the other end of your workbench.

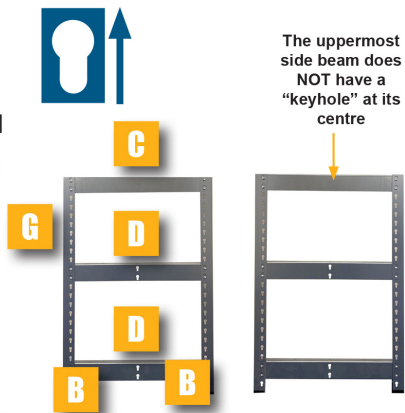


Assemble both ends of the workbench

STEP 3

Join the end pieces created in **Step 2** together using the four 2400mm width beams [B], as pictured right. Ensure that the keyholes in the width beams are the correct way up.


Starting at the bottom, connect the end pieces with the width beams

Your workbench should now look like the one pictured here

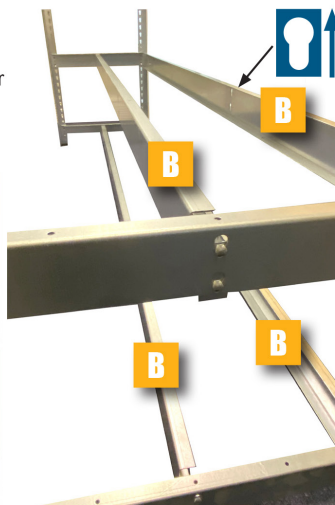

STEP 4

Add the remaining two 2400mm upper width beams [A] to the unit, then link all width beams using the four 310mm shelf supports [E] and the two 600mm shelf supports [F], as pictured. Hammer these shelf supports down in the "keyholes" on the cross beams to provide a tight grip. **IMPORTANT:** You may need to apply pressure to the cross beams in order to bring them closer together to enable the shelf supports to be inserted. This helps give the workbench overall stability.

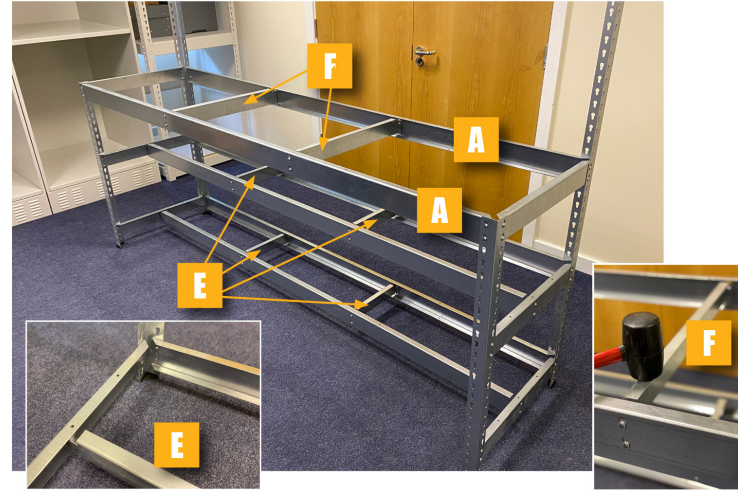

STEP 5

Place all three steel shelves onto the unit.

Thank you for purchasing from ShelvingDirect

If you have any questions regarding the assembly or contents of your order, please call ShelvingDirect® on **0121 508 5877** Monday to Friday 8.30am–5.30pm or email sales@shelvingdirect.co.uk

ShelvingDirect® is a trading name of Rotadex Systems Ltd, Systems House, Central Business Park, Mackadown Lane, Birmingham B33 0JL.



SHELVINGDirect
UK Manufacturer of Shelving & Storage